




# Do it Your Self Fix Terrace Cracks

## WATERSEAL INSTANT CRACK FILLER KIT



### Step -1.

Use a Hand Scraper Or angle Grinder and remove any residue from Cracks. So Chemical can be filled in it.

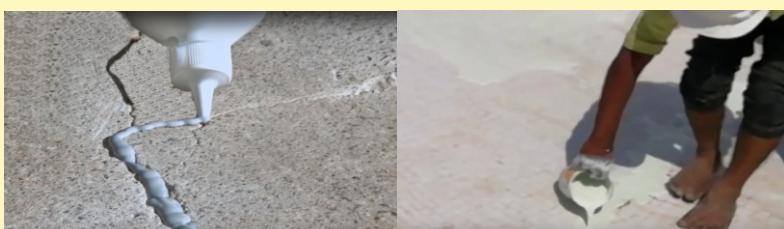

### Step -2.

Fill the Cracks using Machine Oil Bottle .  
Mixing Ratio  
( 1Part Psv Premix + Half Part Water)



### Step - 3.

Fill the Crack Groove with Psv Premix using Putty-knife and Finish Surface.



### Step - 4.

Seal Crack by Placing PPC Mat over the crack joint using Paint brush.  
( 1Part Psv + Half Part Water )

**Note : After Drying Apply the Same Coating over the PPC Mat ( 1Part Psv + 1 Half Part Water)**

**For Better Results Apply 1-3 Coats of Waterseal Premix Coating over entire Terrace.**

**Mixing Ratio: 1 Part Waterseal Premix + 1 Part Clean Water Use 4" Paint Brush.**



### WHAT IS INCLUDED IN A CRACK FILLER KIT



1. Waterseal PSv Premix : 5Kg.
2. PPC Mat Stips : 4" x 100 Feet Approx
3. Needle Bottle100 ml ( For Application)
4. 2" Paint brush : 1 Nos.
5. 4" Hand Scraper : 1 Nos.
6. How to Apply Instruction- Hard Copy.

**Visit For More Details: <https://waterseal.in/shop>**